




# Raised Garden Bed Installation Instructions

Thank you for purchasing your GroWall Kit by Envirolok. Below are detailed installation instructions.

To get started, you will fill each bag with the recommended 60% Granular Sand and 40% Topsoil. Once filled and zip tied, there should be about 4 inches of fabric ("Snorkel") remaining.

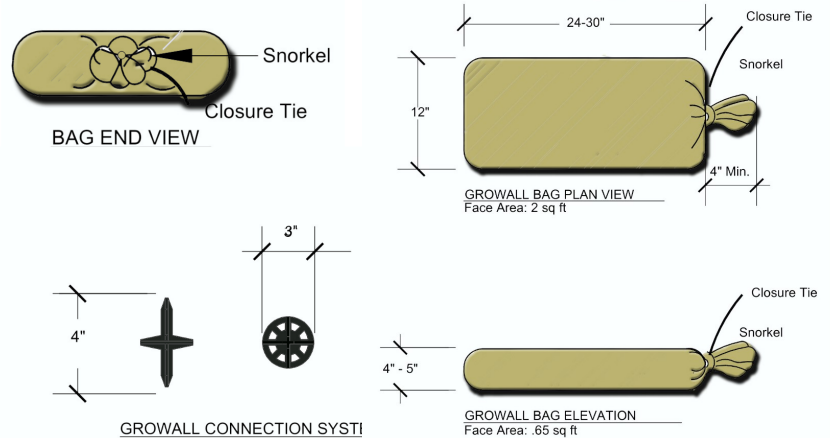

- NOTE:
- Connection System consists of 2 Growall Pins / Bag

- BAG-FILL RECOMMENDATIONS
- Bag-Fill Volume: .75 - .9 Cubic feet / Bag
  - Bag Weight: 45-55 lbs
  - Bag-Fill Content: 60% Granular Sand / 40% Topsoil.

Necessary Supplies: tape measure, shovel, hand tamper, hard rake, safety glasses, contractor bucket , and vegetation.



## STEP 1: DIG TRENCH

Dig a shallow trench along the perimeter of the garden bed. The trench should be 1-2 inches deep and 12 inches wide minimum.



## STEP 2: PLACE PINS & BAGS

Place the connecting pins into the soil, approximately 1 foot apart. Next, place the first row of bags over the pins (2 pins/bag). Place the bags tight against each other and tuck the "snorkel" underneath.



## STEP 3: COMPACT BAG

Once the row is in place, use a hand tamper to compact the bags and level the surface.



---

#### **STEP 4: CONNECTOR PINS**

Press the connector pins firmly into the bag. There should be 2 pins per bag, approximately 1 foot apart.



---

#### **STEP 5: ADD PLANTS**

Place plant material (1-2 plants per bag) on top of the bags. Place a handful of soil around the roots. Do not cut the bags to insert vegetation.



---

#### **STEP 6: SECOND ROW**

Set your next row of bags. Once complete, use a hand tamper to compress the bags.



---

#### **STEP 7: ADDITIONAL ROWS**

Repeat Steps 4-6 until you reach the desired height of your raised garden bed.



---

#### **STEP 8: COMPLETE**

Once you have reached your desired height you can cover the top row of bags with 1 to 2 inches of soil and vegetate. Water after completion. You have now built your GroWall Raised Garden Bed.

Thank you for purchasing your GroWall Kit by Envirolok. If you have any questions about installation or the product please reach out to Envirolok at 608.226.2565 or [Ecosolutions@envirolok.com](mailto:Ecosolutions@envirolok.com)